


# Novastar Base Plate, Multi Pieces, Open at Rear

## Power Utilities

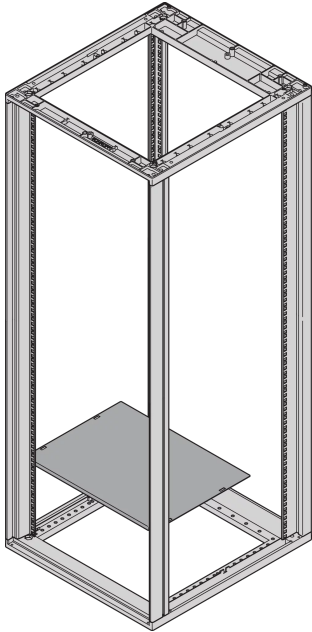

Base plate is a plain steel blanking plate fitted to the cabinet base. Restricts air-flow into the cabinet from floor cavity and can be opened for cable ducting.

### CERTIFICERINGER



### FUNKTIONER

Base is open at rear for cable ducting; opening can be closed with a plain or perforated cover, filter plate or brush strip

Rear opening, width 440 mm, depth 70 mm

### SPECIFIKATIONER

Table 1/1

| Katalognummer | Bredde | Dybde | Farve | Farvekode | Product Type | Type |
|---------------|--------|-------|-------|-----------|--------------|------|
|---------------|--------|-------|-------|-----------|--------------|------|

|           |        |         |            |          |                   |            |
|-----------|--------|---------|------------|----------|-------------------|------------|
| 27230-188 | 553 mm | 500 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-190 | 553 mm | 800 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-192 | 553 mm | 1000 mm | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-189 | 553 mm | 600 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-191 | 553 mm | 900 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |

## YDERLIGERE PRODUKTOPLYSNINGER

Please order cover plate or brush strip separately.

## ADVARSEL

nVent-produkter skal kun installeres og anvendes som angivet i nVents produktvejledninger og træningsmaterialer. Vejledninger er tilgængelige på [www.nvent.com](http://www.nvent.com) og hos din nVent kundeservicerepræsentant. Forkert installation, misbrug, fejlanvendelse eller anden undladelse af fuldt ud at følge nVents instruktioner og advarsler kan medføre funktionsfejl, materielle skader, alvorlige personskader eller død og/eller ugyldiggøre din garanti.



Vores kraftfulde portefølje af mærker:

**CADDY ERICO HOFFMAN ILSCO SCHROFF TRACHTE**