

# Novastar Base Plate, Multi Pieces, Open at Rear

## Power Utilities



Base plate is a plain steel blanking plate fitted to the cabinet base. Restricts air-flow into the cabinet from floor cavity and can be opened for cable ducting.

## CERTIFICATIONS



## FEATURES

Base is open at rear for cable ducting; opening can be closed with a plain or perforated cover, filter plate or brush strip

Rear opening, width 440 mm, depth 70 mm

## SPECIFICATIONS

Table 1/1

| Catalog Number | Width | Depth | Color | Color Code | Product Type | Type |
|----------------|-------|-------|-------|------------|--------------|------|
|----------------|-------|-------|-------|------------|--------------|------|

|           |        |         |            |          |                   |            |
|-----------|--------|---------|------------|----------|-------------------|------------|
| 27230-188 | 553 mm | 500 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-189 | 553 mm | 600 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-190 | 553 mm | 800 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-191 | 553 mm | 900 mm  | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |
| 27230-192 | 553 mm | 1000 mm | Black Grey | RAL 7021 | Cabinet/Rack Base | Base Plate |

## ADDITIONAL PRODUCT DETAILS

Please order cover plate or brush strip separately.

## WARNING

nVent products shall be installed and used only as indicated in nVent's product instruction sheets and training materials. Instruction sheets are available at [www.nvent.com](http://www.nvent.com) and from your nVent customer service representative. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.



Our powerful portfolio of brands:

**CADDY ERICO HOFFMAN ILSCO SCHROFF TRACHTE**