

TCON-CSD/20 Electronic Controller



nVent RAYCHEM TCON-CSD/20 is a compact digital surface sensing thermostat for simple ON/OFF temperature control in non-hazardous areas. The temperature is measured through a sensor and shown on a LCD display. Output relay status is signaled via LED.

FEATURES

Simple to install and operate: DIN rail mounting, commissioned and operated via three soft key push buttons on the front panel

Robust, compact and space saving

Adjustable set point: -200 °C to +500 °C

Time-delay after initial power up: can be used to avoid peak demands on power during start-up

SPECIFICATIONS

| Table 1/2 | | | | | | | | |
|-------------------|-------------|--------------------|----------------|---------------------|-----------------|---------|--|--|
| Catalog Number | Item Name | Thermostat Type | Voltage Rating | Adjustment Range | Contact Type | Height | | |
| 1244-001133 | TCON-CSD/20 | Electronic | 230 - 253 V | -200 to 500 °C | Breaker Contact | 93.5 mm | | |

| Table 2/2 | | | | | | | |
|----------------|-------------|---------|---------|--|--|--|--|
| Catalog Number | Item Name | Width | Depth | | | | |
| 1244-001133 | TCON-CSD/20 | 22.5 mm | 61.6 mm | | | | |

ADDITIONAL PRODUCT DETAILS

Sensing temperature in hazardous area Zone 1 is possible when used in conjunction with MONI-PT100-EXE or MONI-PT100-EXE-SENSOR (separately available). Sensor 'open' and sensor 'short' will be automatically detected and will cause the output to switch to the customer programmed default either permanently ON or OFF. When using 2-wire temperature sensors there will be an error on the temperature readout of approximately 1 °C per 0.39 Ohm lead resistance added. TCON-CSD/20 units

are equipped with an option to compensate for the cable resistance added in order to improve the accuracy. Refer to the installation instructions for more details. When the sensor cable is laid in cable ducts or in the vicinity of high voltage carrying cables the sensor extension cable should be shielded. The shield of the extension cable should be grounded at the controller end only.

WARNING

nVent products shall be installed and used only as indicated in nVent's product instruction sheets and training materials. Instruction sheets are available at www.nvent.com and from your nVent customer service representative. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.

North America

Tel +1.800.545.6258 Fax +1.800.527.5703 thermal.info@nvent.com Europe, Middle East, Africa Tel +32.16.213.511

Fax +32.16.213.604 thermal.info@nvent.com **Asia Pacific**

Tel +86.21.2412.1688 Fax +86.21.5426.3167 cn.thermal.info@nvent.com Latin America

Tel +1.713.868.4800 Fax +1.713.868.2333 thermal.info@nvent.com