 
nVent LENTON INTERLOK FORM SAVER SEAL ACCESSORY






ACCESSORY PART NUMBER	REBAR SIZE		INTERLOK	GROUT TO GROUT
	in.	mm	COUPLER	COUPLER
LKFSA16	#5	16	LK16(D)	-
LKFSA20	#6	20	LK20(D)	LKNT20(D)
LKFSA22	#7	22	LK6, LK7 LK22(D)	LKNT22(D)
LKFSA25	#8	25	LK8 , LK25(D)	LKNT25(D)



 
ALIGN SPRING TABS WITH COUPLER MOUTH, AND SNAP INTO PLACE UNTIL FULLY SEATED. USE RUBBER






FULL SEATED COUPLER

MOUNT LK COUPLER/FLANGE/REBAR ASSEMBLY TO CONCRETE FORM USING A MINIMUM OF (QTY-2) NAILS

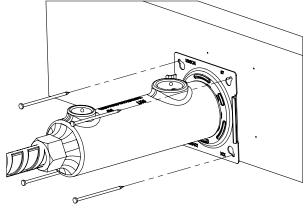

ENSURE COUPLER FLANGE IS MOUNTED FLUSH TO CONCRETE FORM ENSURING A SUFFICIENT SEAL AGAINST THE FORM

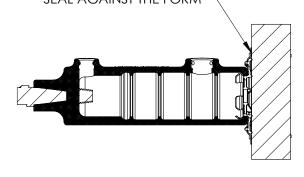

WARNING:

- Novent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at www.nVent.com and from your nVent customer service representative.
- nVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.

 All instructions must be <u>completely</u> followed to ensure proper and safe installation and performance.

 Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, Improper installation, mand void your warranty.

- The customer is responsible for:
 a. Conformance to all governing codes.
 b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
- c. Using appropriate industry standard hardware as noted above.

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.



