


# PEKWM

## Pyramid Equipment Support Wall Mount

Part Number	Option #1 Mounting Holes: M1 (in)[mm]	Option #2 Mounting Holes: M2 (in)[mm]	D1 (in)[mm]	W1 (in)[mm]	W2 (in)[mm]	*Static Load Rating lbs (N)
PEKWM	24 [610]	16 [405]	7 1/2[190] MIN 17 1/2[440] MAX	19[480] MIN 38 1/8[970] MAX	1 5/8[40] MIN 3.5[90] MAX	600 (2,670)

\*Factor of Safety - 3:1

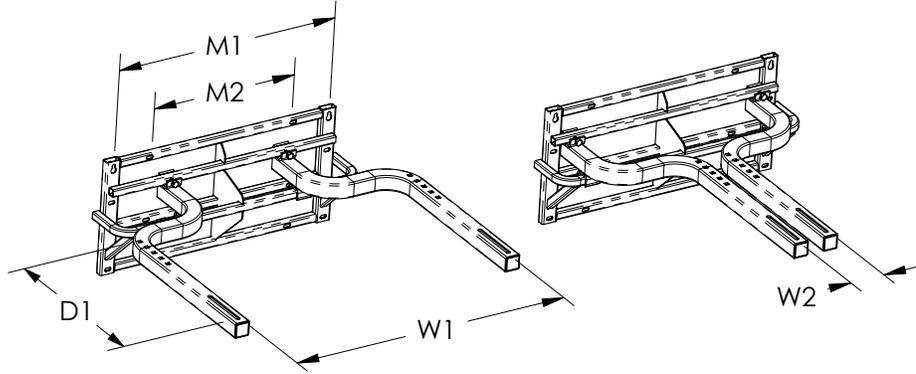

Hardware Included	Quantity
Bubble Level	1
5/16" x 3" Wood Screw	6
5/16" x 1 3/4" Long Concrete Anchor	6
Rubber Cushioning Washer	4
5/16" Steel Washer	6
3/8" Steel Washer	8
3/8-16 x 3 1/2" Long Carriage Bolt	4
3/8-16 Lock Nut	4




### Installation Steps

**#1** Install (2) Upper Fasteners:  
Magnetic Level Included

**#2**

Outside mounting holes  
Option #1 (M1)

**#3** Finish installing all fasteners:  
(6) Total

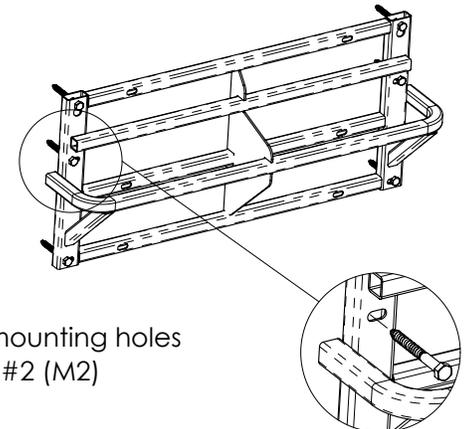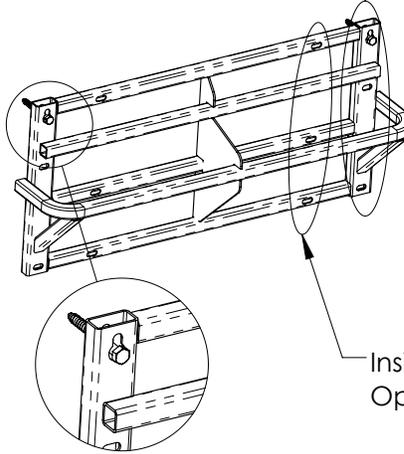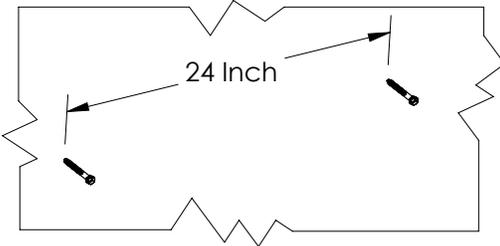

- Concrete Fastener:  
Drill Pilot Hole = 1/2" x 1 3/4" Deep
- Wood Fastener:  
3/16" Pilot Hole
- 16 Inch Mounting and remaining fasteners see step #3

Note: All loads are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted

The customer is responsible for:

- Conformance to all governing codes.
- The integrity of the structure to which the product is attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
- Using appropriate industry standard hardware

**WARNING:**

- nVent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at [www.nVent.com](http://www.nVent.com) and from your nVent customer service representative.
- nVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
- All instructions must be completely followed to ensure proper and safe installation and performance.
- Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, and void your warranty.
- Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.
- All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

The customer is responsible for:

- Conformance to all governing codes.
- The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
- Using appropriate industry standard hardware as noted above.

**SAFETY INSTRUCTIONS:**

All governing codes and regulations and those required by the job site must be observed. Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

nVent, nVent CADDY, nVent ERICO, nVent GARDNER BENDER, nVent ILSCO, nVent KING INNOVATION, and nVent LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without prior notice.



TECHNICAL SUPPORT:  
[www.nVent.com](http://www.nVent.com)

89251532\_A

1 OF 2


© 2025 nVent All Rights Reserved



## #4 Insert Arms


Option #1

- 1) Insert arms at angle
- 2) Drop in place

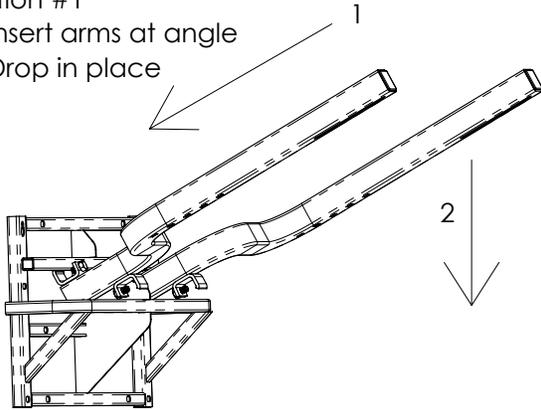

Option #2

- 1) Insert arms between bars
- 2) Rotate arms into position

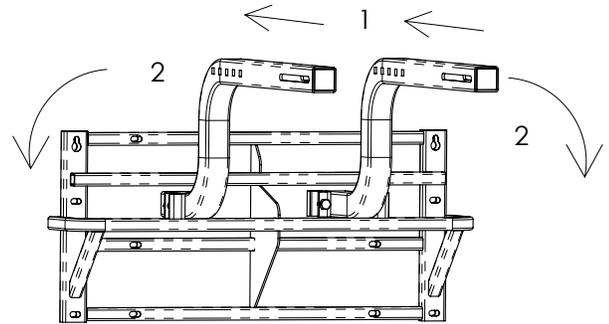

If equipment height allows, can install arms to equipment and then complete this installation.

## #5

- 1) Slide arms to correct position for equipment
- 2) Install equipment (fasteners included)
- 3) Tighten fasteners

