

Instruction sheet for BD-40A & TD-40A series (563720 / 563740)

 


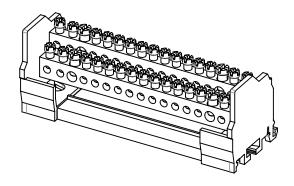

BD Two Pole Distribution Block, 40A BD-40A (563720)

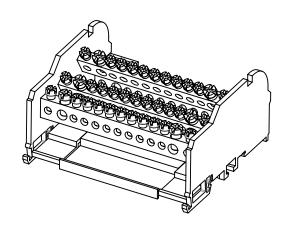

TD Four Pole Distribution Block, 40A TD-40A (563740)



			563720	563740	Hole Ø		ŭ
⇒	6 - 16mm²	4 - 10mm²	x2	x2	6mm	\square \triangle	2 - 3 N.m
⇔	1,5 - 4mm²	0,75 - 4mm²	x15	x11	4,3mm		2 - 3 N.m

1. Tighten screws of unused galleries to torque of 0,5 - 1 N.m

- WARNING:

 NVent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at www.nVent.com and from your nVent customer service representative.
 nVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.

 All instructions must be completely followed to ensure proper and safe installation and performance.
 Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damages, serious bodily injury and/or death, and void your warranty
 damage, serious bodily injury and/or death, and void your warranty.

IP8446_A

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

nVent, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without prior notice.



