


# 19" Module Support

# **Data Solutions**

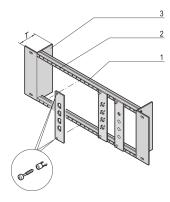

Module support is needed for assembly of partial width front panels with SUB-D-, ST type 3 or FDDI cut-outs, with or without strain relief rail.

# **CERTIFICATIONS**



#### **FEATURES**

For assembly of partial width front panels with SUB-D-, ST type 3 or FDDI cut-outs

Optional front panels Al, 2,5 mm, RAL 7035

Available in two versions: with or without strain relief rail

# **SPECIFICATIONS**

Table 1/1				
Catalog Number	Material	Finish	Package Quantity	Product Type
20118-630	Steel	Aluminum-Zinc Plated	1	Hardware Kit

# ADDITIONAL PRODUCT DETAILS

Please order front panel with / without cut-outs or quick release fastener separately.

Please order 19" assembly kit separately.

# **WARNING**

nVent products shall be installed and used only as indicated in nVent's product instruction sheets and training materials. Instruction sheets are available at www.nvent.com and from your nVent customer service representative. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.



Our powerful portfolio of brands:

**CADDY TRACHTE ERICO HOFFMAN ILSCO SCHROFF**