



EATST03


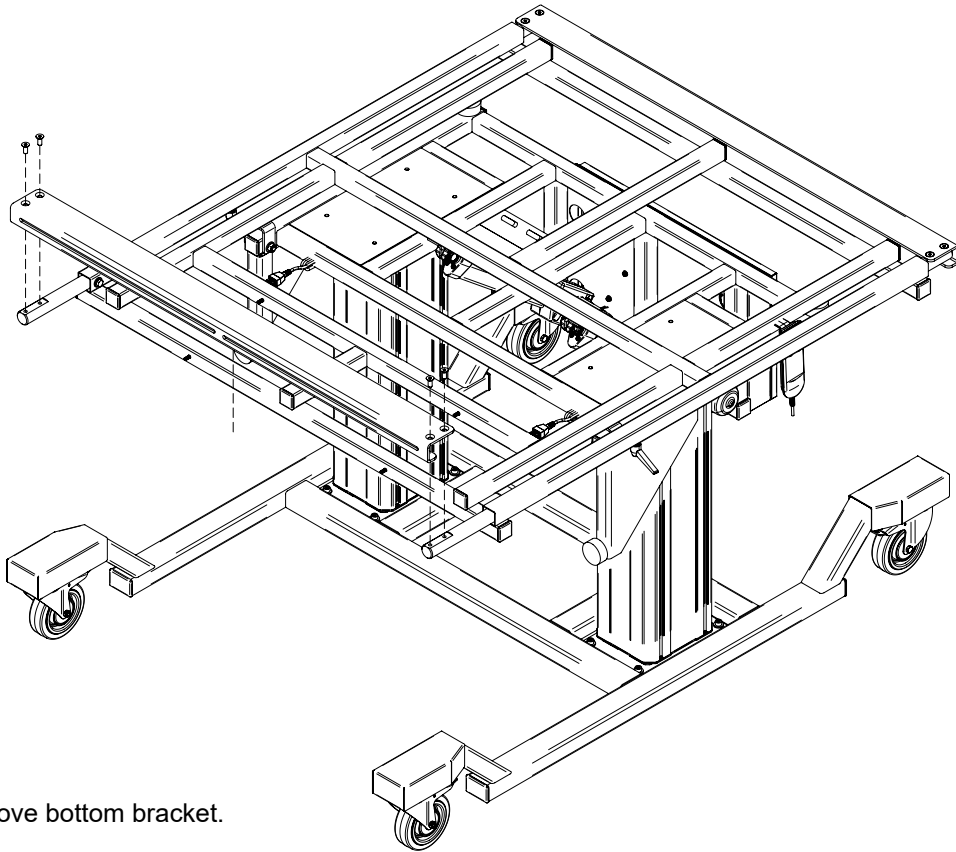


- 1 Remove bottom bracket.

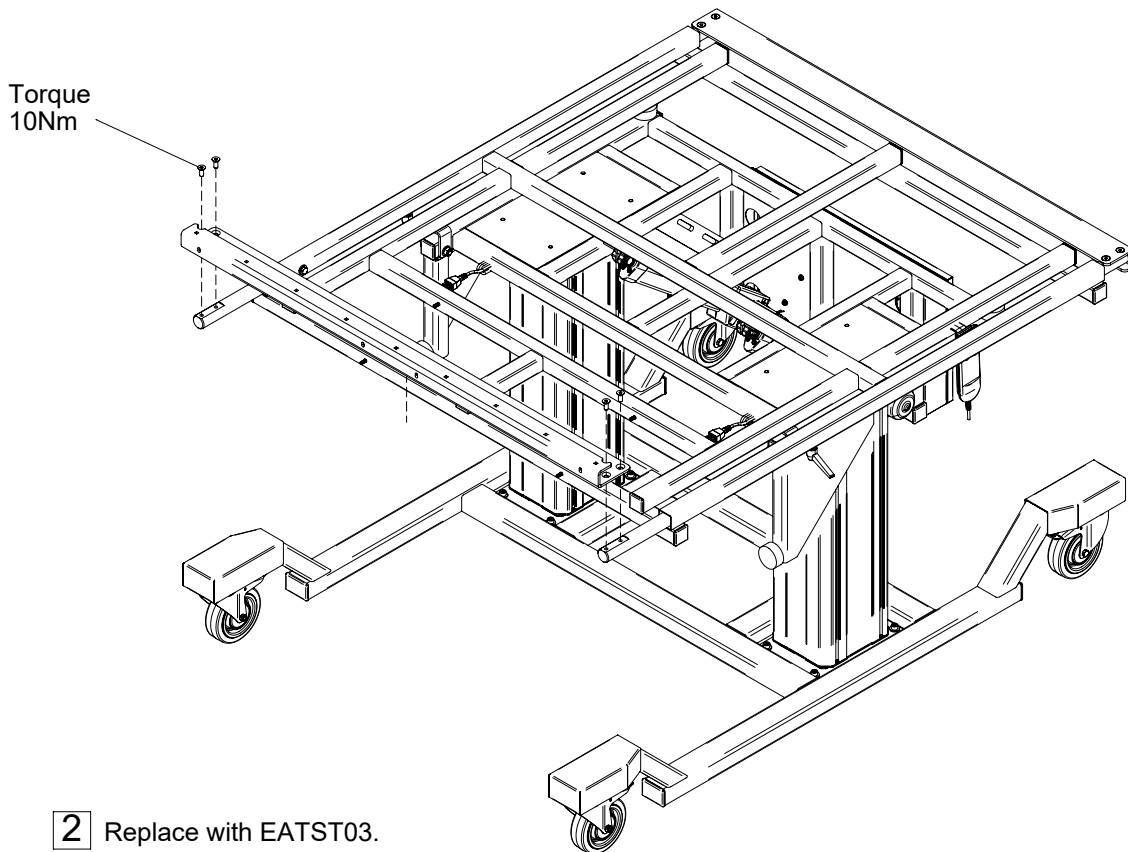

- 2 Replace with EATST03.

MTS09W

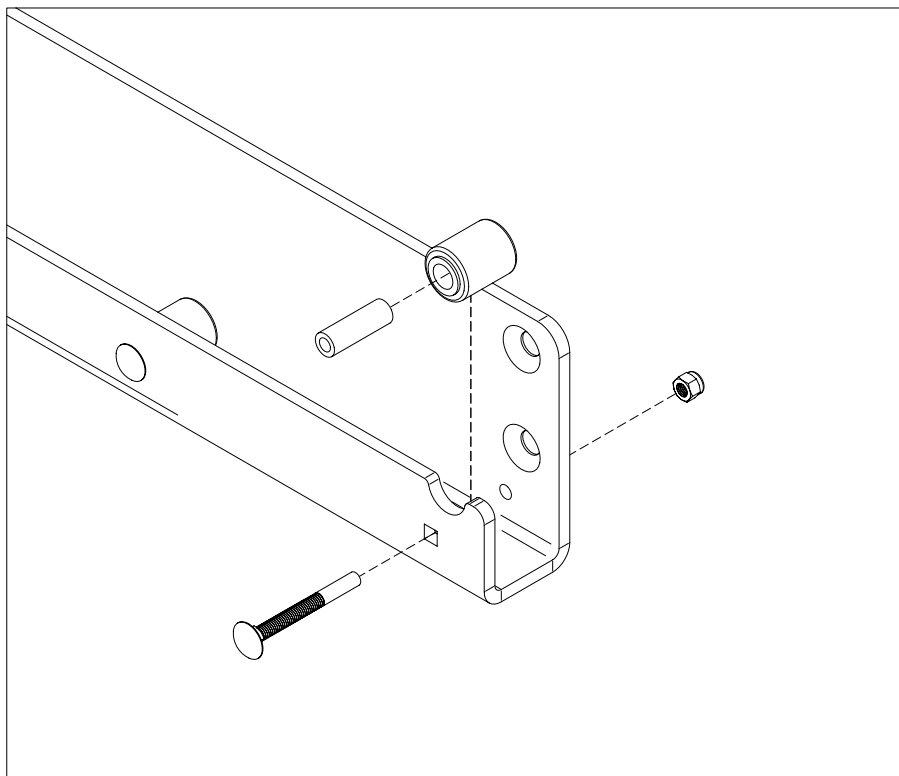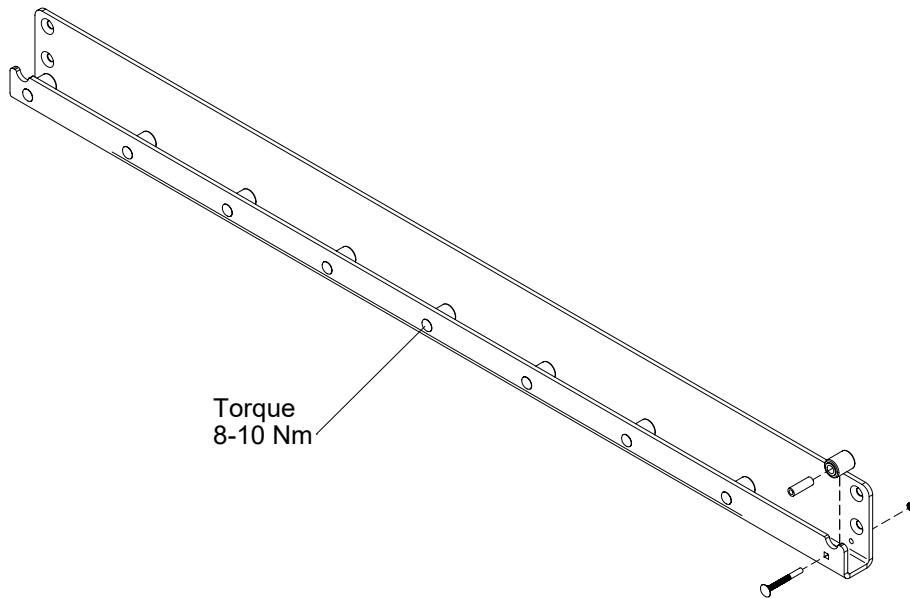

- 3 Install MTS09W if applicable.