



WBT CABLE MANAGEMENT WATERFALL VERTICAL TRAY BRACKET

PART NUMBER	DESCRIPTION	WIDTH	HEIGHT	WEIGHT
WBTWTRVTB12EG	12" VERTICAL TRAY BRACKET (ELECTRO-GALV)	12.42 IN	2.83 IN	.75 LB
WBTWTRVTB12BA	12" VERTICAL TRAY BRACKET (BLACK POWDER COAT)			
WBTWTRVTB20EG	20" VERTICAL TRAY BRACKET (ELECTRO-GALV)	20.38 IN	2.83 IN	1.20 LB
WBTWTRVTB20BA	20" VERTICAL TRAY BRACKET (BLACK POWDER COAT)			

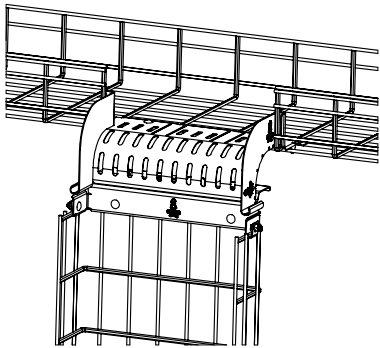


Step 1:

ASSEMBLY VERTICAL TRAY BRACKET (VTB), LOOSELY ONTO WATERFALL AS SHOWN

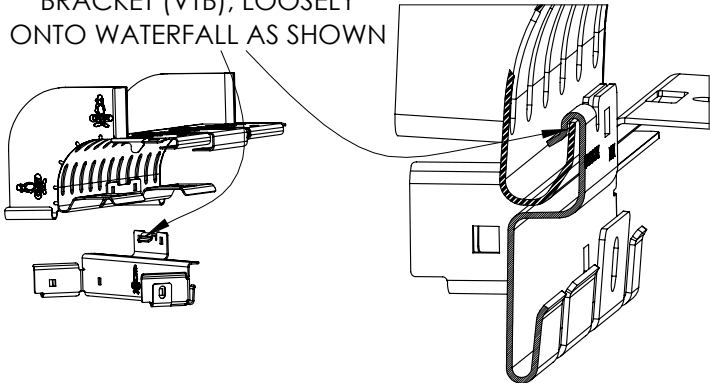


Step 2:

USING THE SUPPLIED 1/4"-20 CARRIAGE BOLT(S) WITH HEX NUT(S), FASTEN BRACKET TO WATERFALL VIA HOLES PROVIDED

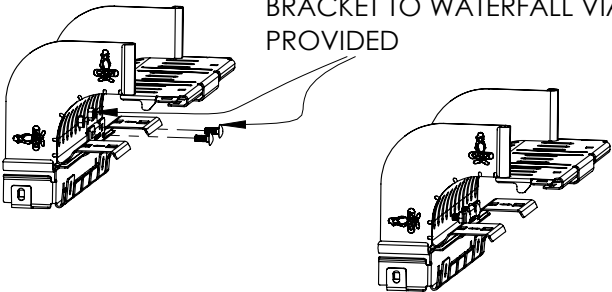


Step 3:

ASSEMBLE CABLE TRAY END WIRE INTO VTB FORMED CHANNEL AS SHOWN

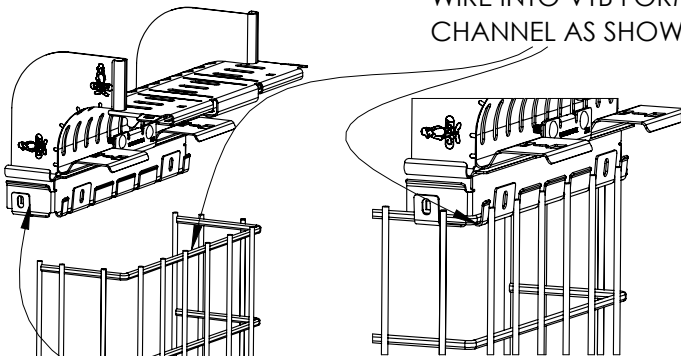

BEND SIDE SHIELDS AS NEEDED IN ORDER TO ASSEMBLE CABLE TRAY INTO VTB SIDE FORMED CHANNELS

Step 4: OPTIONAL

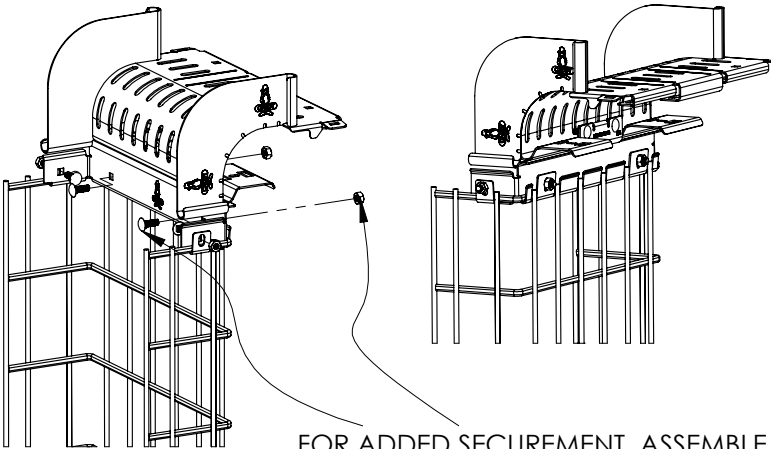

FOR ADDED SECUREMENT, ASSEMBLE (QTY-6) STANDARD 1/4"-20 CARRIAGE BOLT/HEX NUT(S) (NOT INCLUDED)

- WARNING:**
1. nVent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at www.nVent.com and from your nVent customer service representative.
 2. nVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
 3. All instructions must be completely followed to ensure proper and safe installation and performance.
 4. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, and void your warranty.
 5. Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.
 6. All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

The customer is responsible for:
a. Conformance to all governing codes.
b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
c. Using appropriate industry standard hardware as noted above.

SAFETY INSTRUCTIONS:
All governing codes and regulations and those required by the job site must be observed.
Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

nVent, nVent CADDY, nVent ERICO Cadweld, nVent ERICO Critec, nVent ERICO, nVent ERIFLEX, and nVent LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without prior notice.

TECHNICAL SUPPORT:
www.nVent.com


89235442_A

1 OF 2

© 2023 nVent All Rights Reserved




OVER-RAIL MOUNT:

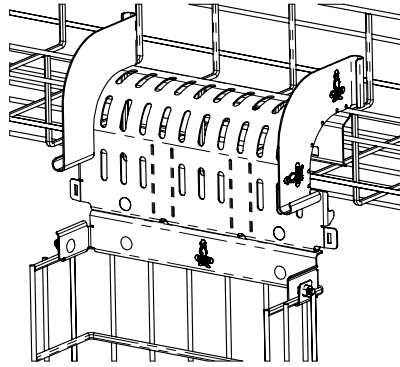


Step 1:

ASSEMBLY VERTICAL TRAY BRACKET (VTB), LOOSELY ONTO WATERFALL AS SHOWN

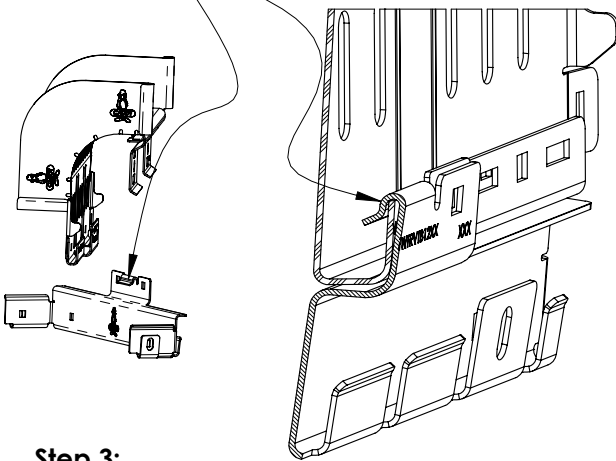


Step 2:

USING THE SUPPLIED 1/4"-20 CARRIAGE BOLT(S) AND HEX NUT(S), FASTEN BRACKET TO WATERFALL VIA HOLES PROVIDED

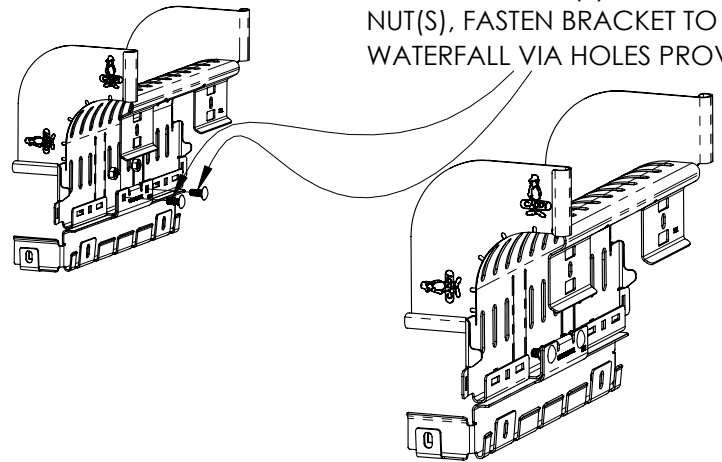


Step 3:

ASSEMBLE CABLE TRAY END WIRE INTO VTB FORMED CHANNEL AS SHOWN

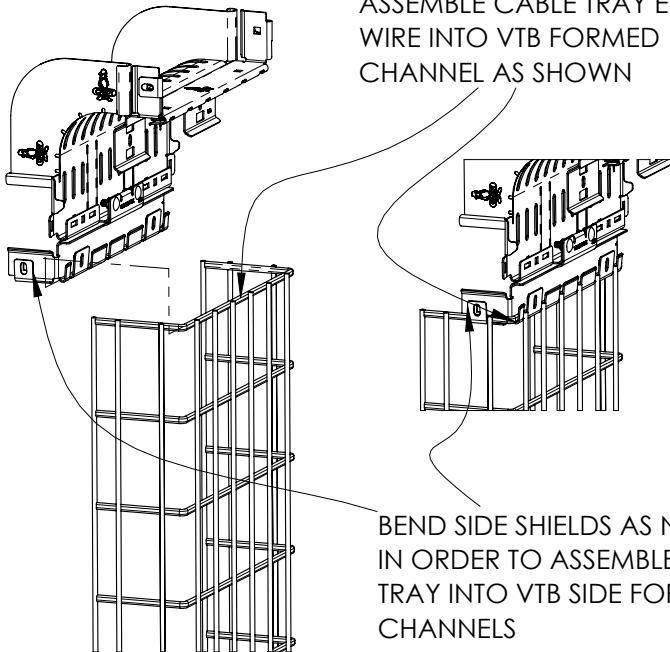

BEND SIDE SHIELDS AS NEEDED IN ORDER TO ASSEMBLE CABLE TRAY INTO VTB SIDE FORMED CHANNELS

Step 4: (OPTIONAL)

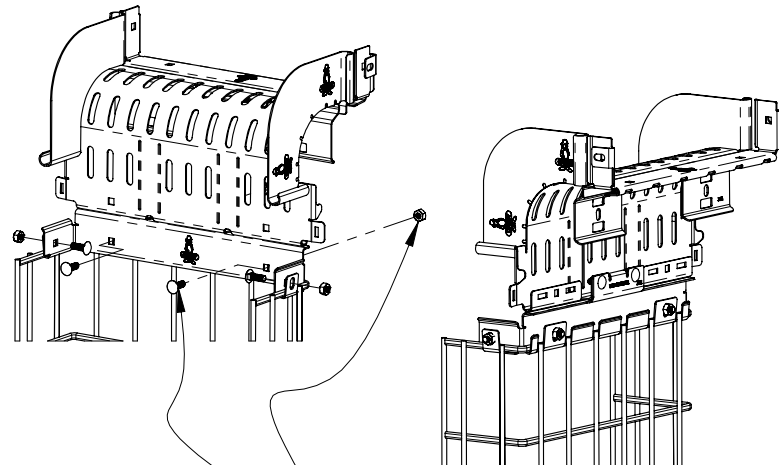

FOR ADDED SECUREMENT, ASSEMBLE (QTY-6) STANDARD 1/4"-20 CARRIAGE BOLT/HEX NUT(S) (NOT INCLUDED)