





NVENT THERMAL MANAGEMENT  
 7433 HARWIN DRIVE  
 HOUSTON, TX 77036  
 TOLL FREE: 1-800-545-6258  
 PHONE: (650) 216-1526  
 FAX: (800) 527-5703  
[www.nvent.com/pyrotenax](http://www.nvent.com/pyrotenax)

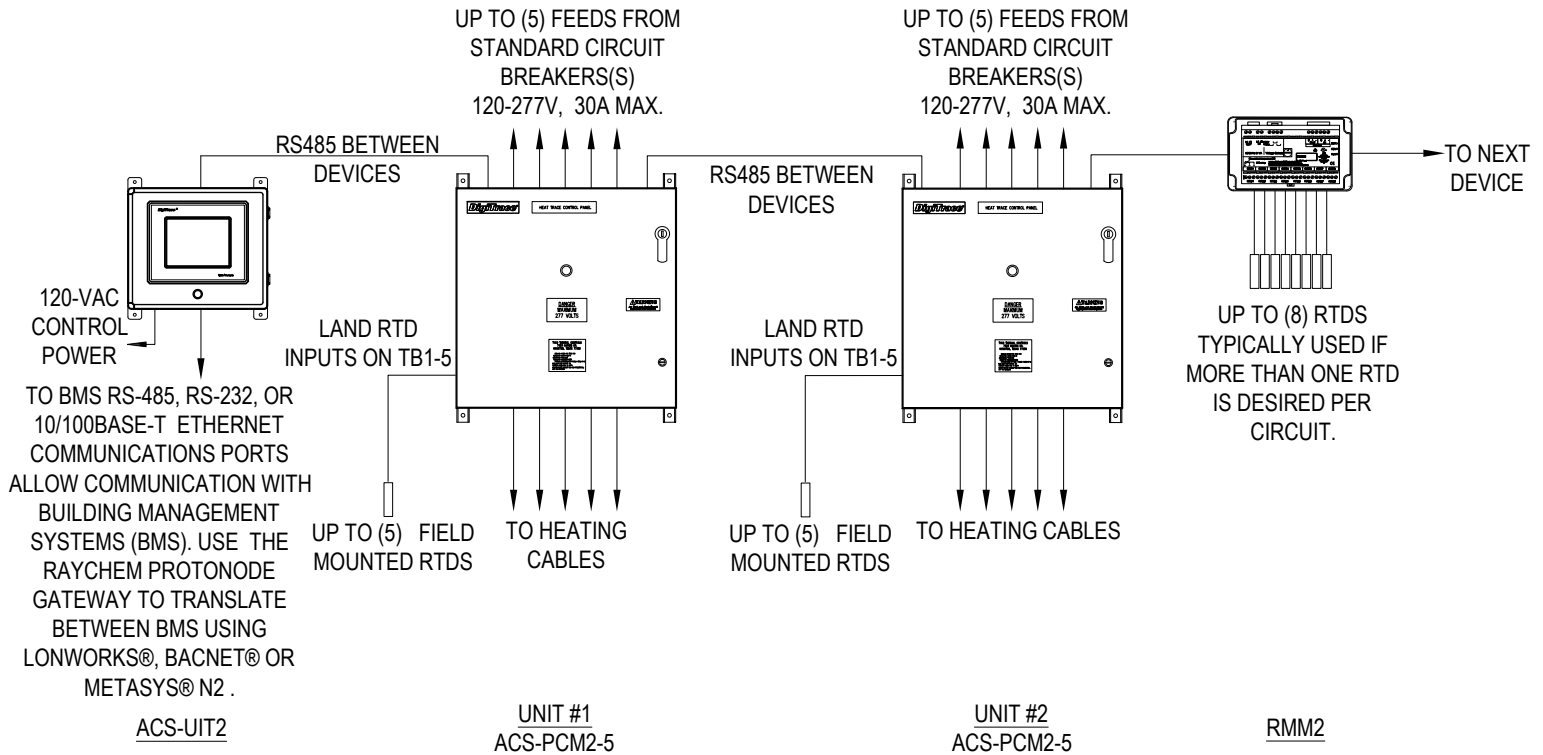

#### NOTES:

1. RS-485 CABLE USE BELDEN #8761OR CAROL # C2514
2. DEVICES MAY BE "DAISY CHAINED" IN ANY ORDER BUT MUST BE IN A STRAIGHT LINE.
3. TEEING LINE IS NOT PERMITTED.
4. EACH ACS-PCM2-5 PANEL MUST BE GIVEN AN INDIVIDUAL ADDRESS. CONSULT INSTALLATION GUIDE FOR ADDRESS DIAL LOCATION.
5. THE LAST COMPONENT IN THE 485 "CHAIN" MUST HAVE THE END OF LINE RESISTOR IN THE PROPER LOCATION. CONSULT INSTALLATION GUIDES FOR PROPER RESISTOR LOCATIONS
6. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S INSTALLATION INSTRUCTIONS.
7. DO NOT SCALE DRAWINGS.
8. CONTRACTORS NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT [www.CADdetails.com/info](http://www.CADdetails.com/info) REFERENCE NUMBER 3408-158.

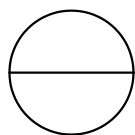

## ELECTRONIC CONTROLLERS

RAYCHEM ACS30 SYSTEM WIRING DIAGRAM